


▶ Loop Lanyard Installation - To a Tool Hole

1. Feed cuff through open Loop
2. Cinch Lanyard tight

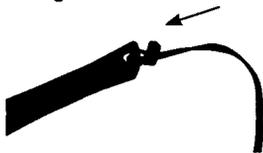


3. Tighten Barrel Lock to Secure



LOOP CINCH SECURE



Note: When securing velcro strap, ensure minimum of **ONE INCH** overlap of hook and loop.

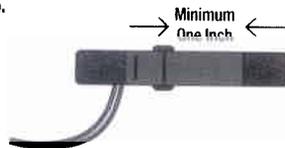

Warning

Insure wrist strap is cinched tight enough around wrist to prevent slipping off but still comfortable.

Warning

Looping around tool and cinching tight with a barrel lock is **NOT** recommended as barrel lock may become dislodged and lanyard could slip off tool. For this type of installation, remove barrel lock and tape cinched cord to tool with FRSS tape.



6-0027-08 Rev B

▶ B For Attaching Directly to Tool

For detailed instructions or assistance,
Contact Hammerhead:
info@gearkeeper.com 888-588-9981



WARNING

- Modification of tool tether or components will void tool ratings
- Connecting two or more tethers or adding/extending tether length will void tool ratings.
- Inspect tool tether and tool attachment before each use for wear or damage and repair or replace if necessary
- Inspect tool tether after tool drop for signs of wear or strain and replace if necessary
- Inspect tool attachment after tool drop for signs of slippage and reinstall if necessary
- See Tool Attachment Instructions for proper installation.
- Do not exceed tool weight limits
- Not for personal fall protection
- Do not use around machinery

WARNING

- Attaching a tool that is too heavy to a person can result in injury!
- Max tool weight should be approved by a qualified safety professional.
- NOTE: Tool Lanyard rating may be higher than your approved limit.

NOTE: If unsure of how to use this product or have any questions, contact Hammerhead:
805-658-9922
info@gearkeeper.com

Hammerhead's Guarantee of Quality

If you are not satisfied with any Hammerhead Product, we will replace it or refund your money within thirty days after purchase through the original dealer. Hammerhead Industries warrants its products against manufacturing defects in workmanship or materials. The warranty is void if the product has been abused beyond normal and sensible wear and tear or used for purposes other than intended.



(888) 588-9981 / (805) 658-9922
info@gearkeeper.com

ANSI/ISEA 121-2018



Gear Keeper

Standard Wrist Lanyard

Load Limit: 5 lb / 2.2 kg
TL1-2005 Length: 10" / 25 cm
TL1-2004 Length: 20" / 50 cm



MADE IN THE USA

TL1-2004
Deluxe Wrist Lanyard 20"



6 53096 12004 8