


## Installation Guide for 3/8" Stainless Steel Band-It Tie-Lok Ties with the TL3800 Tool




**Step 1:** Form a clamp by threading the end of the tie through the buckle, with the gap in the buckle facing up.



**Step 2:** Tighten the band by hand to maintain a minimum clamp tail of 3 inches to ensure the tip of the clamp tail can be inserted into the winding mandrel.

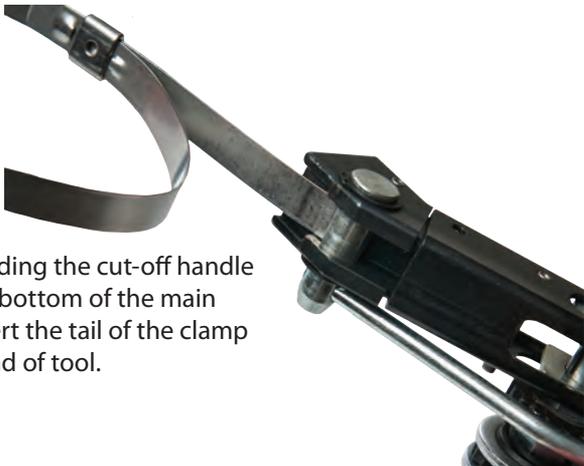

**Step 3:** Holding the cut-off handle against the bottom of the main handle, insert the tail of the clamp into the head of tool.

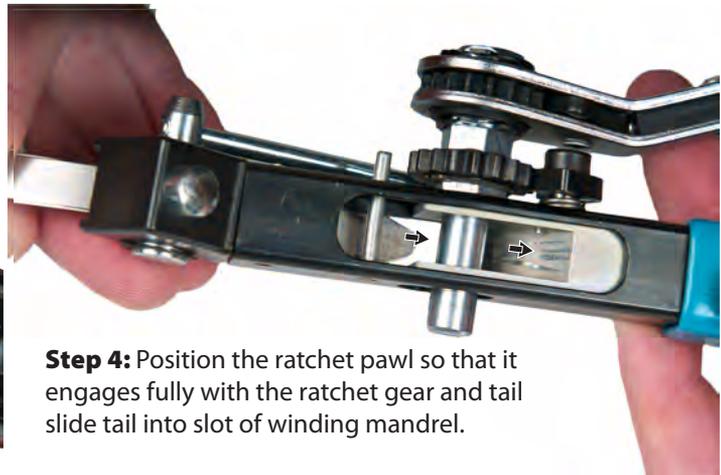

**Step 4:** Position the ratchet pawl so that it engages fully with the ratchet gear and tail slide tail into slot of winding mandrel.



**Step 5:** Tension the clamp with forward strokes of ratchet handle.



**Step 6:** When the desired tension is reached or the ratchet gear makes contact with the stop pin, release the ratchet handle. Tension will be maintained by the ratchet pawl.